


# CENTER BOARD BRAKE

NO SLOT IN CENTER BOARD

NEED A 10/24 NC TAP TO PUT thread into LOWER PLATE


counter sunk  
wood screw  
holes

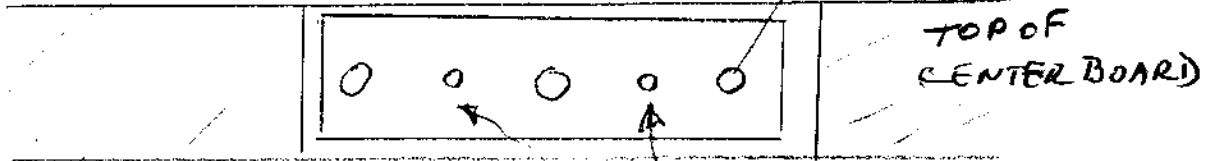

Threaded holes in Lower metal plate  
to accept machine bolts that squeeze  
the rubber hose

TOP  
metal  
plate

3/16" - NC 10/24  
machine bolts squeeze Rubber  
BRAKE  
hose

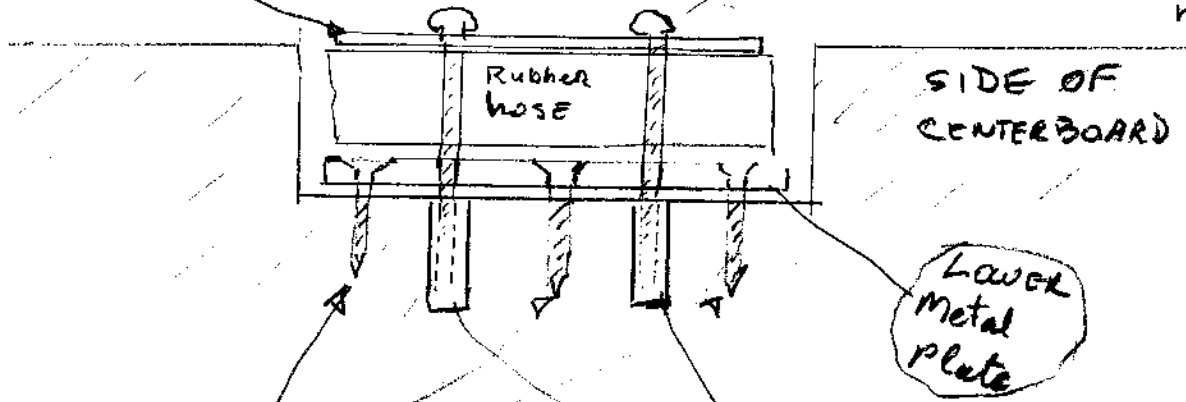

2" Wood  
screws #8  
embed  
in  
to hold  
BRAKE TO  
BOARD  
permanently

DRILL holes 5/16" and Fill the  
holes with epoxy to SEAL  
the wood. Then  
DRILL out holes with a  
DIE the same size as  
machine bolts

ALL metal used is  
stainless steel.